



Lamp Base Replacement Kit

Installation Instructions

1. Turn off the power.
2. Remove the power cord and connector cord from the unit.
3. Remove the lamp/reflector assembly from the mounting stand and place it on a flat surface with the lamp facing up.
4. Remove the lamp.
5. Remove the lamp/reflector assembly from the housing by removing the four screws, two on each side, from the reflector.
6. Remove the two screws, from the side of the unit holding the ignitor in place (locate inside a blue fireproof sleeve) and remove sleeve.
7. Loosen the screws and remove the wires from the ignitor at locations marked N and La. The white Teflon wire at location N will have to be clipped from the lamp base wire and re-stripped.
8. Remove both lamp bases and install the new lamp bases from the Lamp Base Replacement Kit.
9. Take one of the lamp bases and crimp on a supplied terminal (PN 35202, smaller terminal); this wire will be installed in the La location on the ignitor.
10. The remaining lamp base wire will be tied in with the white Teflon wire and a supplied terminal (PN 35218, larger terminal) crimped on. This wire will be installed in the N location on the ignitor.
11. Place the ignitor back into the blue heat protective sleeve and fasten to the side of the housing using the two screws that had been removed in Step #6.
12. Place the reflector back into the housing and fasten with the four remaining screws.
13. Exercise lamp base springs with Nylon Rod (PN 38712) included in the kit.
14. Place the lamp back into the unit.

www.dymax.com

Americas

USA | +1.860.482.1010 | info@dymax.com

Europe

Germany | +49 611.962.7900 | info_de@dymax.com
Ireland | +353 21.237.3016 | info_ie@dymax.com

Asia

Singapore | +65.67522887 | info_ap@dymax.com
Shanghai | +86.21.37285759 | dymaxasia@dymax.com
Shenzhen | +86.755.83485759 | dymaxasia@dymax.com
Hong Kong | +852.2460.7038 | dymaxasia@dymax.com
Korea | +82.31.608.3434 | info_kr@dymax.com

© 2021 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. Dymax does not warrant the data contained in this bulletin. Any warranty applicable to the product, its application and use is strictly limited to that contained in Dymax's standard Conditions of Sale. Dymax does not assume responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than Dymax or act as a grant of license under any Dymax Corporation Patent. Dymax recommends that each user adequately test its proposed use and application before actual repetitive use, using the data contained in this bulletin as a general guide. QS027 08/16/2021